

TTC 400

Transponder Test and Configuration unit



TTC 400 description

The TTC 400 has been developed to provide a quick and easy way to test and configure all applications on Kongsberg Maritime transponders, prior to sea deployment.

The TTC 400 is based around a splash-proof, small «all in one» and portable unit. The unit is equipped with carrying handles.

A small transducer on a cable, connects to the front of the unit. This is all what is required to in-air-test transponders anywhere the operator should choose to perform a thorough test, or reconfiguring a transponder.

- The TTC 400 applies for HiPAP, HPR 400 and HPR 300 channels.
- The TTC 400 can test and configure transponders using the 30 kHz frequency band (MF).

TTC 400 standard model

The TTC 400 unit is for use on deck / in air.

Option

As an option, the TTC 400 can be used with an over-theside dunking transducer for test and configuration of transponders at sea.

Operation

The TTC 400 is easy to operate. This is done via the menu system on the LCD display, using dedicated pushbuttons. The display has background lights for operations at night.


The TTC 400 can perform the following:

- Checks response on interrogation based on known channel
- Set transponder / TTC 400 transmitter power level and receiver sensitivity
- Scan for channel with reset
- Switching of channel
- Enable / disable
- Transponder release
- Read battery status
- Read sensor data, if any
- Responder function (requires the dedicated responder cable)
- Beacon
- Reset to transponder internal switch settings
- Auto storage of last 20 used transponder configuration settings

The TTC 400 unit can be used while connected to the mains!

MF test transducer

The test transducer is a small moulded transducer to be held / placed face to face with the transponder transducer, to ensure good "acoustic connection".

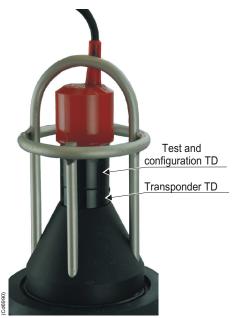

Specifications

TTC 400 unit

MF test transducer

Length	80 mm
Diameter	55 mm
Weight in air	approximately 0,7 kg
Cable length	

Rechargeable battery


Battery type	Lead / acid
Operation (fully charged battery)	5 hours
Recharge voltage	/ac / (50-60) Hz
Recharging time	14 hours

Frequencies and channels

Medium frequency (MF).....(21 - 32) kHz

Channels:

- All 56 HiPAP / HPR 400 channels (B12 B87)
- All 14 HPR 300 channels (B01 B09), B11, B22, B33, B44 and B55

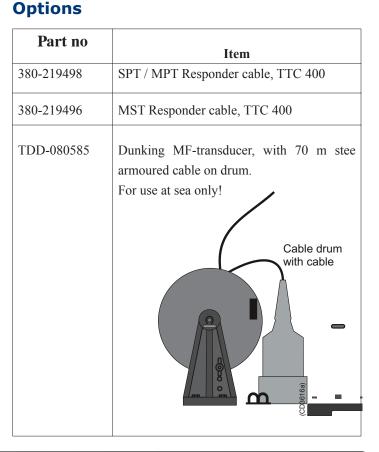

Kongsberg Maritime AS

Strandpromenaden 50 P.O.Box 111 N-3191 Horten, Norway Telephone: +47 33 02 38 00 Telefax: +47 33 04 47 53 www.kongsberg.com E-mail: subsea@kongsberg.com

